


MENJAVA CEVNEGA GRELCA S PERLANIM
CHANGING THE TUBULAR HEATER WITH THE GROOVED HEATER


1. Odstrani zadnji in spodnji pokrov pečice , sprosti izolacijo

Remove rear and bottom cover, release the insulation

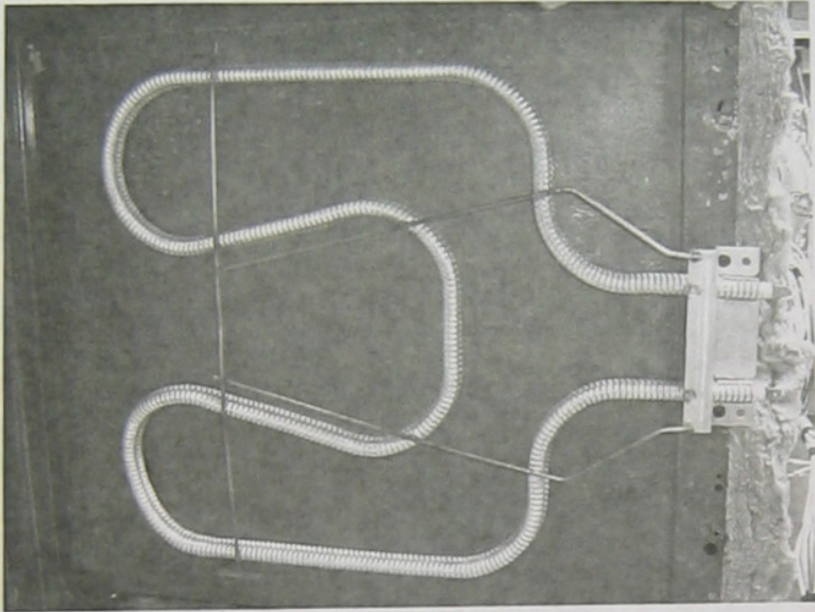

2. Odstrani cevni grelec, ter vstavi perlan grelec

Remove the tubular heater and place the grooved one

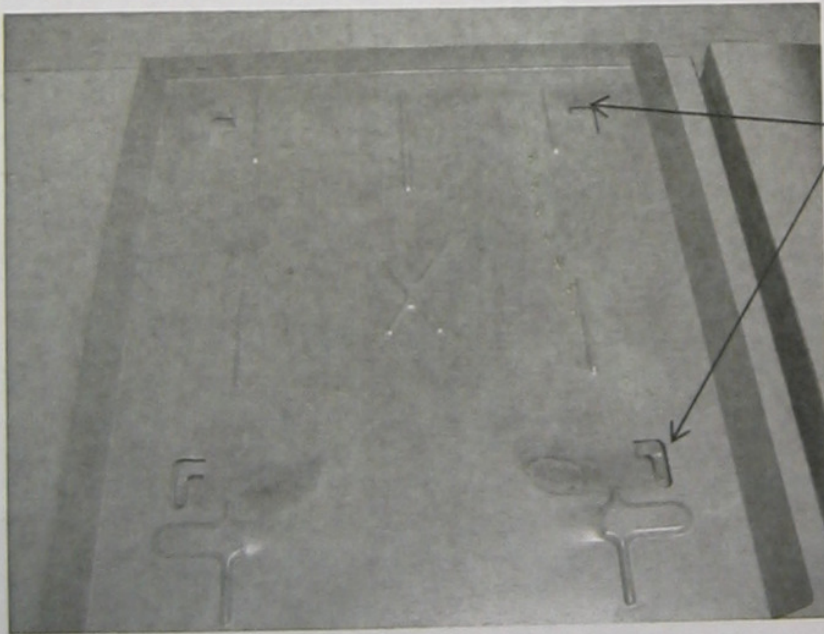

3. Ustrezno pripravi zaščitno pločevino ter jo ponovno namesti (zaradi držanja zadnje izolacije)

Prepare the protective sheet and place it again (for holding of the rear insulation)

4. Namesti izolacijo ter zadnji in spodnji pokrov

Place again the insulation, bottom and rear cover